
UV830 Series HD Video Conference Camera <u>User Manual</u>

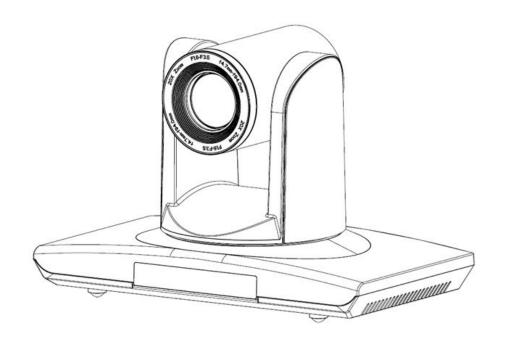

1.0 version (English)

Preface:

Thanks for using our HD color video conference camera.

This manual introduces the function installation and operation of the HD camera. Prior to installation and usage, please read the manual thoroughly.

Warning

This product can be only used in specified range in order to avoid any damage or danger;

- •Don't expose the camera to rain or moisture place
- •Don't remove the cover to reduce the risk of electric shock. Refer servicing to qualified personnel.
- •Never operate the camera under unqualified temperature , humidity and power supply;
- •Please use the soft cloth to clean the camera. Use neuter cleanser if bad smeared .Don't use the strong or cleanser avoiding scuffing.

Notes

Electromagnetic fields at the specific frequency may affect the image quality.

CONTENTS

1.Notes 4
2.Accessories 4
3.Fast Installation
4.Camera Highlights 7
5.Camera Specifications
6.Camera Interface Explanation 8
7.Remote Controller Explanation9
8.Usage of IR Remote Controller
9.RS-232C Interface (Pin Specs)
10.Menu Setting

Notes

Electric Safety

Installation and operation must accord with electric safety standard

Caution to transport

Avoid stress, vibration and soakage in transport, storage and installation.

Polarity of power supply

The power supply of the product is $\pm 12V$; the max electrical current is 2A.

Polarity of the power supply drawing



Never move the camera by seizing the camera head. Don't rotate camera head by hand; otherwise, mechanical trouble will occur.

This series item must put on the smooth desk or platform, and it can not be installed slantways;

If the camera is installed on TV or computer, the base can be fixed by three double-sided adhesive trays.

Don't apply in corrosive liquid, gas or solid environment to avoid the cover which is made up of organic material. To make sure no obstacle in rotation range

Never power on before installation is not completed


Don't dispatch discretionarily

We are not responsible for any unauthorized modification or dismantling.

Accessories


Fast Installation

1. Please check the connection before turning on the power.

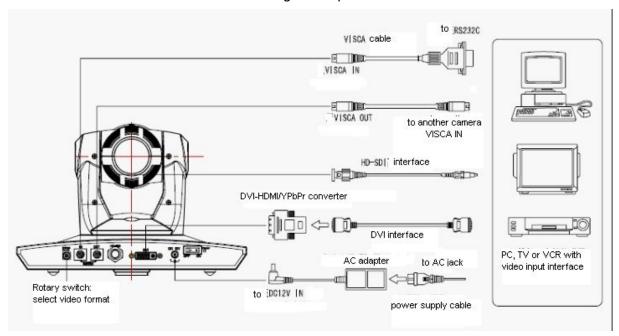

2. Bottom Dial Switch Setting

Set the two switches 【ON】.it is the normal working mode.

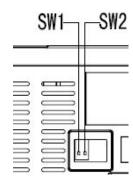

	SW2-2	SW2- 1	Instructions
1	OFF	OFF	Undefined
2	ON	OFF	Updating mode
3	OFF	ON	Debugging mode
4	ON	ON	Working mode

3. The Rotary Switch Setting

The choice for 16 rotary switch video formats

Dial-up		
0	1080P60	
1	1080P50	
2	1080160	
3	1080150	
4	720P60	
5	720P50	
6	1080P30	
7	1080P25	

8		
9		
Α		
В		
С		
D		
Е		
F	Display the video format set on the menu	

Note: Restart the camera after switching the dial code.

- 4. When the power supply switch is " on ", the indicator light is open (red color)
- 5, Camera initializes after powering on: horizontally to the left turn to the limit position, vertically turn to the bottom; finally both horizontal and vertical turn to the middle position. The motor stops running, and initialization is completed.(Note: If the power-on mode is opened and saved preset position 0 or 1, then the pan/tilt will be set to 0 or 1 preset position)
- 6.Factory Default : entry OSD menu by pressing the menu key of remote controller, $[MENU] \rightarrow [RESET] \rightarrow [ALL RESET]$, moving the left/right key to select [Yes], then confirm by [HOME] key .

RESI	ET
=======	======
SYS. RESET	NO
CAM. RESET	NO
P T. RESET	NO
ALL. RESET	NO
BACK / M E N	U

Camera Highlights

- 1. Equipped with modern appearance and 20X HD CMOS sensor, delivering vivid images.
- 2.Support sound interfaces,DVI interface (inclding YPbPr, VGA and HDMI signal) and HD-SDI interface.
- 3.IR remote controller signal transparent transmission function: camera can receive both its own remote controller signal and the one from terminal equipment, by transmitting the signal through VISCA IN to terminal equipment IR receiver.

Camera Specifications

1.video format: 1080P60/50、1080P30/25、1080I60/50、720P60/50

2.Output Interface : DVI interface (including YPbPr, VGA and HDMI signal) , HD-SDI interface.

and CVBS (for selections)

3.Image Sensor: 1/2.8 inch 2 Megapixel (1920*1080)HD CMOS Sensor

4.Focal: f4.7mm-94mm, (20×optical zoom), F1.6-3.5, angle of view: 55.2°-209°.

5.the Rotation : $\pm 170^\circ$ for pan rotation , and $-30^{\circ \sim} + 90^\circ$ for tilt rotation , support upside down installation .

6.the Control speed :: 0.1°-150°/sec for pan rotation , 0.1°-80°/sec for tilt rotation .

7.Preset position NO. : 10 preset positions (can reach to 128 by serial command), precision error less than 0.2°.

8. Support auto/ manual white balance , auto/manual exposure (iris , shuttle) , auto/manual/OnePush focus

9.support WDR technical: performance ≥100dB,

10.Control Signal interface: 8 pin mini DIN,RS232, VISCA/Pelco-D/Pelco-P


11. Power interface: HEC3800 power jack, Power supply adapter: DC12V/1.5A,

12.Max Consumption: 12W


13.working temperature: -5° C to $+45^{\circ}$ C 14.Storage temperature: -20° C to $+60^{\circ}$ C

15.Weight:2.0kg

Camera Interface Explanation

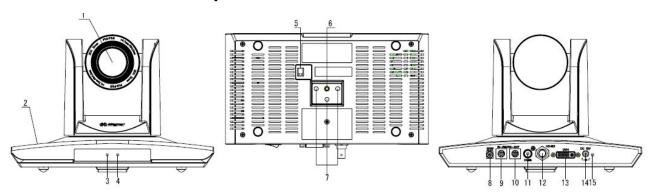


- 1.Camera lens
- 2.Camera base
- 3. Power indicator light
- 4. Remote Controller Receiver light
- 5.Bottom dial Switch
- 6. Tripod screw hole
- 7.Installation Orientation Hole
- 8. Rotary Switch: video format optional
- 9.RS232 controller serial interface (input)
- 10.RS232 controller serial interface (output)
- 11.CVB interface (for selection)
- 12.HD-SDI interface
- 12.DVI-I interface(including YPbPr ,HDMIHD Digital Output and VGA interface)
- 13.DC12V Input Power Supply Jack
- 14.Power Switch(red)
- 15. Power indicator light(red)

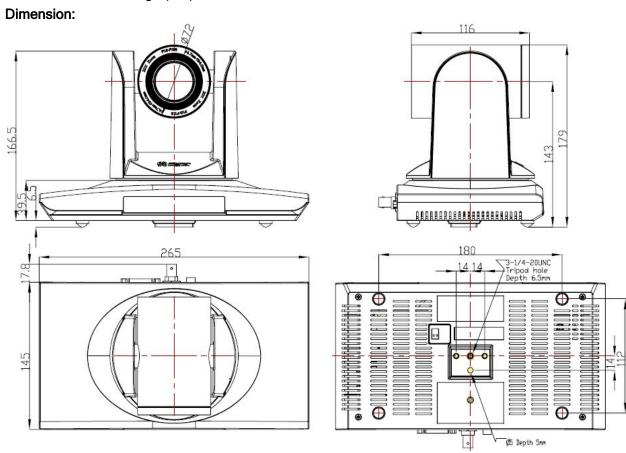

Remote Controller Explanation

Definition of IR controller

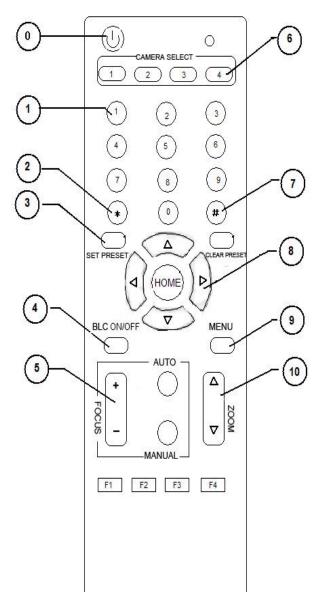

0. Standby key

After pressing the standby key, the camera will step into standby mode. Press again, the camera will open again. (Note: Standby mode power consumption is about half of the normal mode)

1. Number key

Setting or locating presets

2、* key

Key combination use

3. Set preset key:

Set preset:

Set preset key + 0-9 number key:

Clear preset key:

Clear preset key + 0-9 number key

or: #+#+#: clear all the presets

4、BLC control key

BLC ON: open black light compensation (only work when exposure mode setting is Auto)
BLC OFF: close black light compensation
(Only available in the exposure mode effective for Auto)

5. Focus control key

 $\label{eq:focus} \textit{Focus} + : \ \textit{focus length far from near}$

Focus—: focus length near from far

Auto focus: the camera focus mode is auto

Manual focus: the camera focus mode is manual

6. Camera address selection

Select the camera which want to be controlled

7、 # key

8 pan/tilt control key

Press ≜key : up

Press ▼key : down Press ◀key : left Press ►key: right

"HOME" key: Return to the middle position

9. Menu setting

Open or close the OSD menu

10 Zoom Control key

zoom+: lens near zoom-: lens far

11.Camera IR remote control address selection


[*] + [#] + [F1]: Camera Address No.1
[*] + [#] + [F2]: Camera Address No. 2
[*] + [#] + [F3]: Camera Address No. 3
[*] + [#] + [F4]: Camera Address No. 4

Usage of IR Remote Controller

Finishing initialization, it can receive and execute the IR commands. Users can control the pan/tilt/zoom, setting and running preset positions via the IR remote controller. Key Instruction:

- 1. In this instruction, "press the key" means a click rather than a long-press, and a special note will be given if a long-press for more than one second is required.
- 2. When a key-combination is required, do it in sequence. For example, " [*] + [#]
- + [F1] "means press" [*] "first and then press" [#] " and press" [F1] "at last.

1.Pan/Tilt Control

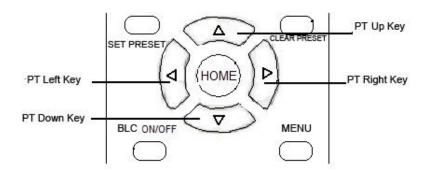

Up: press ♣

Down: press ▼


Left: press ◀

Right: press ▶

Back to middle position: press" [HOME] "

Press and hold the up/down/left/right key, the pan/tilt will keep running, from slow to fast, until it run to the endpoint; The pan/tilt running stops as soon as the key is released.


2. Zoom Control

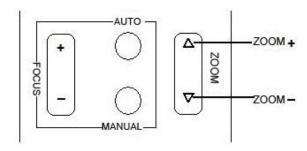

ZOOM OUT: press "ZOOM ▲" key ZOOM IN: press "ZOOM ▼" key

Press and hold the key, the camera will keep zooming in or zooming out and stops as soon as the key is released.

3. Focus Control

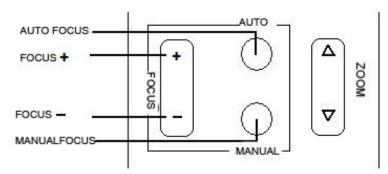

Focus (far): Press " 【focus+】 " key
Focus (near): Press " 【focus-】 "key

Auto Focus: Press " [auto] "

Manual Focus: Press " [manual] "


Press and hold the key, the action of focus continues and stops as soon as the key is released.

4.BLC Setting




BLC ON / OFF :not support

5. Presets setting

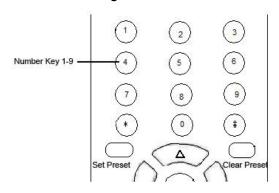

- 1 \cdot Preset setting \cdot : to set a preset position, the users should press the " [SET PRESET] " key first and then press the number key 0-9 to set a relative preset, 10 preset positions in total are available.
- 2. Preset clearing: to clear a preset position, the user can press the "【CLEAR PRESET】" key first and then press the number key 0-9 to clear the relative preset; Note: press the "【#】" key three times continually to cancel all the presets.


6.Preset Running

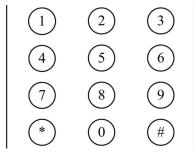

Press a number key 0-9 directly to run a relative preset.


Note: Action in vain if a relative preset position is not existed.

7. Camera Selection

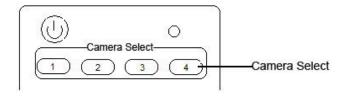


Select the camera address to control.

8. Camera Remote Controller Address Setting

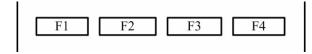


- [*] + [#] + [F1]: Camera Address No.1
- [*] + [#] + [F2]: Camera Address No. 2
- [*] + [#] + [F3]: Camera Address No. 3
- [*] + [#] + [F4]: Camera Address No. 4

RS-232C Interface (Pin Specs)

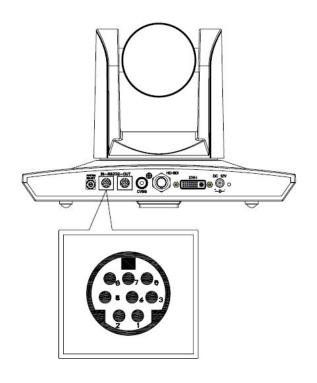


Camera Windows DB-9

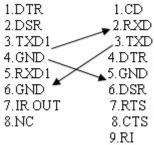


No.	Function	
1	DTR	
2	DSR	
3	TXD1	
4	GND	
5	RXD1	
6	А	
7	IR OUT	
8	В	


Camera Mini DIN

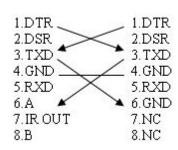

VISCA OUT Function

Camera RS485

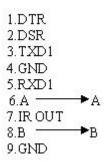

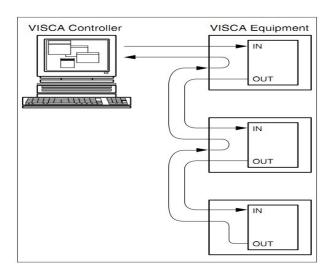

COM control

In the normal working condition, the camera can be controlled via the RS-232C/RS485 command (VISCA IN) . The parameter of the RS232C COM is as following :

Baud Rate: 2400/4800/9600/115200 Bit/S

Start bit: 1bit;
Data bit: 8bit;
Stop bit: 1bit;
Code: None

Powering on, the camera runs to the down left, then back to the middle with the farthest zoom rate in the auto focuse and the auto exposure mode. Finishing the initiazation, the camera moves to the preset no.0 or no.1 if it's saved. Now, the camera can be controlled by the serial command.

VISCA Protocol

Part1. Camera Return Command

Ack/Completion Message				
Command Packet Note				
ACK	z0 41 FF	Returned when the command is accepted.		
Completion z0 51 FF Returned when the command has been executed.				

z = Camera Address + 8

Error Messages					
	Command Packet	Note			
Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted			
Command Not Executable	z0 61 41 FF	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.			

Part 2 Controlling Command

Command	Function	Command Packet	Note
AddressSet	Broadcast	88 30 01 FF	Address setting
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CommandCancel		8x 21 FF	
	On	8x 01 04 00 02 FF	
CAM_Power	Off	8x 01 04 00 03 FF	Power ON/OFF
	Stop	8x 01 04 07 00 FF	
	Tele(Standard)	8x 01 04 07 02 FF	
	Wide(Standard)	8x 01 04 07 03 FF	
CAM_Zoom	Tele(Variable)	8x 01 04 07 2p FF	
	Wide(Variable)	8x 01 04 07 3p FF	p = 0(low) - 7(high)
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position
	Stop	8x 01 04 08 00 FF	
	Far(Standard)	8x 01 04 08 02 FF	
CAM_Focus	Near(Standard)	8x 01 04 08 03 FF	
_	Direct	8x 01 04 48 0p 0q 0r 0s FF	pgrs: Focus Position
	One Push AF	8x 01 04 18 01 FF	
CAM_ZoomFocu		8x 01 04 47 0p 0q 0r 0s	pqrs: Zoom Position
S	Direct	0t 0u 0v 0w FF	tuvw: Focus Position
	Auto	8x 01 04 35 00 FF	Normal Auto
	Indoor	8x 01 04 35 01 FF	
CAM_WB	Outdoor	8x 01 04 35 02 FF	
	OnePush	8x 01 04 35 03 FF	
	Manual	8x 01 04 35 05 FF	
	Reset	8x 01 04 03 00 FF	
CAM_RGain	Up	8x 01 04 03 02 FF	Manual Control of R Gain
CAW_NGain	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain
	Reset	8x 01 04 04 00 FF	
CAM_Bgain	Up	8x 01 04 04 02 FF	Manual Control of B Gain
CAM_bgain	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain
	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
CAM_AE	Shutter priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure mode
	Iris priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode
	Bright	8x 01 04 39 0D FF	Bright mode(Manual control)
	Reset	8x 01 04 0A 00 FF	
CAM Chuttor	Up	8x 01 04 0A 02 FF	Shutter Setting
CAM_Shutter	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq: Shutter Position
	Reset	8x 01 04 0B 00 FF	
OAM Isia	Up	8x 01 04 0B 02 FF	Iris Setting
CAM_Iris	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq: Iris Position
	Reset	8x 01 04 0C 00 FF	
CAM Cain	Up	8x 01 04 0C 02 FF	Gain Setting
CAM_Gain	Down	8x 01 04 0C 03 FF	
	Direct	8x 01 04 0C 00 00 0p 0q FF	pq: Gain Positon
CAM Del 11	Reset	8x 01 04 0D 00 FF	Driving Continue
CAM_Bright	Up	8x 01 04 0D 02 FF	Bright Setting

Command	Function	Command Packet	Note		
	Down	8x 01 04 0D 03 FF			
	Direct	8x 01 04 4D 00 00 0p 0q FF	pq: Bright I Positon		
	On	8x 01 04 3E 02 FF	F ONIOFF		
	Off	8x 01 04 3E 03 FF	Exposure Compensation ON/OFF		
0445	Reset	8x 01 04 0E 00 FF			
CAM_ExpComp	Up	8x 01 04 0E 02 FF	Exposure Compensation Amount Setting		
	Down	8x 01 04 0E 03 FF			
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq: ExpComp Position		
	Reset	8x 01 04 02 00 FF			
	Up	8x 01 04 02 02 FF	Aperture Control		
CAM_Aperture	Down	8x 01 04 02 03 FF			
	Direct	8x 01 04 42 00 00 0p 0q FF	pq: Aperture Gain		
	Reset	8x 01 04 3F 00 0p FF	p: Memory Number(=0 to 127)		
CAM_Memory	Set	8x 01 04 3F 01 0p FF	Corresponds to 0 to 9 on the Remote		
_ ,	Recall	8x 01 04 3F 02 0p FF	Commander		
CAM LR Revers	On	8x 01 04 61 02 FF			
e	Off	8x 01 04 61 03 FF	Image Flip Horizontal ON/OFF		
	On	8x 01 04 66 02 FF			
CAM_PictureFlip	Off	8x 01 04 66 03 FF	Image Flip Vertical ON/OFF		
VideoSystem Set		8x 01 06 35 00 0p FF	P: 0~7 Video format 0:1080P60 1:1080P50 2:1080i60 3:1080i50 4:720P60 5:720P50 6:1080P30 7:1080P25		
CAM_IDWrite		8x 01 04 22 0p 0q 0r 0s FF	pqrs: Camera ID (=0000 to FFFF)		
SYS_Menu	OFF	8x 01 06 06 03 FF	Turn off the menu		
	On	8x 01 06 08 02 FF			
IR_Receive	Off	8x 01 06 08 03 FF	IR(remote commander)receive ON/OFF		
	On/Off	8x 01 06 08 10 FF	(
IR ReceiveRetur	On	8x 01 7D 01 03 00 00 FF	IR(remote commander)receive message		
n	Off	8x 01 7D 01 13 00 00 FF	via the VISCA communication ON/OFF		
	Up	8x 01 06 01 VV WW 03 01 FF			
	Down	8x 01 06 01 VV WW 03 02 FF			
	Left	8x 01 06 01 VV WW 01 03 FF			
	Right	8x 01 06 01 VV WW 02 03 FF			
	Upleft	8x 01 06 01 VV WW 01 01 FF			
	Upright	8x 01 06 01 VV WW 02 01 FF	VV: Pan speed 0x01 (low speed) to 0x18		
	DownLeft	8x 01 06 01 VV WW 01 02 FF	(high speed)		
Pan_tiltDrive	DownRight	8x 01 06 01 VV WW 02 02 FF	WW: Tilt speed 0x01 (low speed) to 0x14 (high speed)		
	Stop	8x 01 06 01 VV WW 03 03 FF	YYYY: Pan Position(TBD)		
	AbsolutePosition	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	ZZZZ: Tilt Position(TBD)		
	RelativePosition	8x 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF			
	Home	8x 01 06 04 FF			
	Reset	8x 01 06 05 FF			
Pan-tiltLimitSet	Set	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W:1 UpRight 0:DownLeft - YYYY: Pan Limit Position(TBD)		
i air-uitLiiiitOGt	Clear	8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF	ZZZZ: Tilt Limit Position(TBD)		

Part3 Checking Command

Command	Command Packet	Return Packet	Note
CAM_PowerIng	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off(Standby)
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusModeInq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
		y0 50 00 FF	Auto
		y0 50 01 FF	Indoor mode
CAM_WBModeInq	8x 09 04 35 FF	y0 50 02 FF y0 50 03 FF	Outdoor mode OnePush mode
		y0 50 03 FF	ATW
		y0 50 04 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 11 y0 50 00 00 0p 0q FF	pg: R Gain
CAM BGainIng	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: R Gain
G/ WI_Baaii iiiq	0X 00 01 1111	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
0444 4544 4 4	0 00 04 00 55	y0 50 0A FF	Shutter priority
CAM_AEModeInq	8x 09 04 39 FF	y0 50 0B FF	Iris priority
		y0 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_GainPosiInq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain Position
CAM_ BrightPosiInq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompModel	8x 09 04 3E FF	y0 50 02 FF	On
nq	0X 00 0 1 0 E 1 1		
	2 22 24 45 55	y0 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_MemoryInq	8x 09 04 3F FF	y0 50pp FF	pp: Memory number last operated.
SYS_MenuModeInq	8x 09 06 06 FF	y0 50 02 FF y0 50 03 FF	On Off
CAM_LR_ReverseIng	8x 09 04 61 FF	y0 50 03 FF	On
CAW_LN_Neverselliq	00 03 04 01 FF	y0 50 02 FF	Off
CAM_PictureFlipIng	8x 09 04 66 FF	y0 50 03 FF	On
Gravi_r local or ripiniq		y0 50 03 FF	Off
CAM_IDInq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pgrs: Camera ID
		y0 50 ab cd	
CAM_VersionInq	8x 09 00 02 FF	mn pq rs tu vw FF	
		y0 50 0p FF	P: 0~7 Video format 0:1080P60 1:1080P50 2:1080i60 3:1080i50 4:720P60 5:720P50 6:1080P30 7:1080P25
IR Receive	8x 09 06 08 FF	y0 50 02 FF	On Off
		y0 50 03 FF	Off Power ON/OFF
		y0 07 7D 01 04 00 FF y0 07 7D 01 04 07 FF	Power ON/OFF Zoom tele/wide
		y0 07 7D 01 04 07 FF	AF On/Off
IR_ReceiveReturn		y0 07 7D 01 04 38 FF	CAM_Backlight
		y0 07 7D 01 04 35 FF	CAM_Backlight CAM_Memory
		y0 07 7D 01 04 3F FF	Pan tiltDrive
B		1	ww: Pan Max Speed
Pan-tiltMaxSpeedInq	8x 09 06 11 FF	y0 50 ww zz FF	zz: Tilt Max Speed
Pan tiltPoolna	8v 00 06 12 EE	y0 50 0w 0w 0w 0w	wwww: Pan Position
Pan-tiltPosInq	8x 09 06 12 FF	0z 0z 0z 0z FF	zzzz: Tilt Position

Note: [x] means the camera address you want to control, [y] = [x + 8].

Pelco-D Protocol

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
Up	0xFF	Address	0x00	0x08	Pan Speed	Tilt Speed	SUM
Down	0xFF	Address	0x00	0x10	Pan Speed	Tilt Speed	SUM
Left	0xFF	Address	0x00	0x04	Pan Speed	Tilt Speed	SUM
Right	0xFF	Address	0x00	0x02	Pan Speed	Tilt Speed	SUM
Zoom In	0xFF	Address	0x00	0x20	0x00	0x00	SUM
Zoom Out	0xFF	Address	0x00	0x40	0x00	0x00	SUM
Focus Far	0xFF	Address	0x00	0x80	0x00	0x00	SUM
Focus Near	0xFF	Address	0x01	0x00	0x00	0x00	SUM
Set Preset	0xFF	Address	0x00	0x03	0x00	Preset ID	SUM
Clear Preset	0xFF	Address	0x00	0x05	0x00	Preset ID	SUM
Call Preset	0xFF	Address	0x00	0x07	0x00	Preset ID	SUM
Query Pan Position	0xFF	Address	0x00	0x51	0x00	0x00	SUM
Query Pan Position Response	0xFF	Address	0x00	0x59	Value High Byte	Value Low Byte	SUM
Query Tilt Position	0xFF	Address	0x00	0x53	0x00	0x00	SUM
Query Tilt Position Response	0xFF	Address	0x00	0x5B	Value High Byte	Value Low Byte	SUM
Query Zoom Position	0xFF	Address	0x00	0x55	0x00	0x00	SUM
Query Zoom Position Response	0xFF	Address	0x00	0x5D	Value High Byte	Value Low Byte	SUM

Pelco-P Protocol

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Up	0xA0	Address	0x00	0x08	Pan Speed	Tilt Speed	0xAF	XOR
Down	0xA0	Address	0x00	0x10	Pan Speed	Tilt Speed	0xAF	XOR
Left	0xA0	Address	0x00	0x04	Pan Speed	Tilt Speed	0xAF	XOR
Right	0xA0	Address	0x00	0x02	Pan Speed	Tilt Speed	0xAF	XOR
Zoom In	0xA0	Address	0x00	0x20	0x00	0x00	0xAF	XOR
Zoom Out	0xA0	Address	0x00	0x40	0x00	0x00	0xAF	XOR
Focus Far	0xA0	Address	0x00	0x80	0x00	0x00	0xAF	XOR
Focus Near	0xA0	Address	0x01	0x00	0x00	0x00	0xAF	XOR
Set Preset	0xA0	Address	0x00	0x03	0x00	Preset ID	0xAF	XOR
Clear Preset	0xA0	Address	0x00	0x05	0x00	Preset ID	0xAF	XOR
Call Preset	0xA0	Address	0x00	0x07	0x00	Preset ID	0xAF	XOR
Query Pan Position	0xA0	Address	0x00	0x51	0x00	0x00	0xAF	XOR

Query Pan Position Response	0xA0	Address	0x00	0x59	Value High Byte	Value Low Byte	0xAF	XOR
Query Tilt Position	0xA0	Address	0x00	0x53	0x00	0x00	0xAF	XOR
Query Tilt Position Response	0xA0	Address	0x00	0x5B	Value High Byte	Value Low Byte	0xAF	XOR
Query Zoom Position	0xA0	Address	0x00	0x55	0x00	0x00	0xAF	XOR
Query Zoom Position Response	0xA0	Address	0x00	0x5D	Value High Byte	Value Low Byte	0xAF	XOR

Menu Setting

1. Main Menu

In normal working mode, press 【MENU】 key to display the menu, using scroll arrow to point at or highlight the selected items.

MAIN

LANGUAGE / 语言设置

(SYSTEM OPTION)

(CAMERA OPTION)

(PT OPTION)

(V. FORMAT)

(RESET)

(HELP)

VGA OUTPUT

EXIT / MENU

LANGUAGE: Language setting, Chinese / English

SYSTEM OPTION: system setting CAMERA OPTION: camera setting

PT OPTION: pan tilt setting

V. FORMAT: video format setting

RESET: reset setting

HELP: for help

VGA OUTPUT: ON / OFF VGA in the P video format, No VGA in the I video format

Note: Component signal is available only when VGA is off.

2. SYSTEM OPTION

Move the pointer to the (SYSTEM SET) in the Main Menu, click the 【HOME】 and enter the (SYSTEM SET) as follow,

SYSTEM SET

PROTOCOL

ADDR

B. RATE

RS485

ARM. VER

FPGA. VER

CAM. VER

BACK / MENU

PROTOCOL: VISCA/Pelco-P/Pelco-D

ADDR: VISCA=1~7 Pelco-P/Pelco-D = $1^{\sim}63$

2400/4800/9600/115200 B. RATE:

RS485: It is ON when using RS485 communication

ARM VER./FPGA VER/CAM VER: Display the edition information

3.CAMERA OPTION

Move the pointer to the (CAMERA SET) in the Main Menu, click the **\[\]**HOME \[\] and enter the (CAMERA SET) as follow,

EXPOSURE: exposure setting

COLOR: color setting LEN: lens setting

3.1 EXPOSURE SETTING

Move the pointer to the (EXPOSURE) in the Main Menu, click the 【HOME】 and enter the (EXPOSURE SET) as follow,

EXPOSURE EXP. MODE SHUTTER IRIS GAIN BRIGHT EV. MODE LEVEL WDR LEVEL BACK / M E N U

EXP. MODE: Auto, Manual, Shutter, Iris

SHUTTER: 1/25 \, 1/50 \, 1/75 \, 1/100 \, 1/125 \, 1/150 \, 1/215 \, 1/300 \, 1/425 \, 1/600 \,

1/1000 (only available in Manual Shutter mode)

IRIS: 0~17 (only available in Manual Iris mode)

BRIGHT: 0~9

GAIN: 0~15 (only available in Manual mode)

EV MODE: On/Off (only available in non manual model)

LEVEL: 0~3 WDR: On/Off LEVEL: 0~5

3.2 COLOR SETTING

Move the pointer to the (COLOR SET) in the Main Menu, click the 【HOME】 and enter the (COLOR SET) as follow,

WB MODE: White balance mode setting: Auto, Indoor, Outdoor, One Push, ATW, Manual

R.GAIN: Red gain setting: $0^{-}50$ (only available in Manual mode) **B.GAIN:** Blue gain setting: $0^{-}50$ (only available in Manual mode)

SATURATION: 0~9 **APERTURE:** 0~9

FLICK: 50HZ/60HZ/OFF

3.3 LENS SETTING

Move the pointer to the (LEN SET) in the Main Menu, click the **HOME** and enter the (LEN SET) as follow,

LEN
=========

FOCUS AUTO

BACK / MENU

FOCUS: Auto, Manual, OnePush

4. PAN TILT SETTING

Move the pointer to the (PT SET) in the Main Menu, click the 【HOME】 and enter the (PT SET) as follow,

PT SET

=============

POWER. ACT

SPEEDBYZ

MOUNT. MODE

IR M.SPEED

IR Z.SPEED

MIN.SPEED

SCAN. SPEED

BACK / MENU

返回 / MENU

POWER ACT: 0/1(the camera will move to no.0/1 preset position after 12 seconds without control since power on), Off

SPEEDBYZ: only work for IR remote control:

On when the camera zoom becomes larger, rotation speed comes down), Off

MOUNT.MODE: UP, DOWN

IR M.SPEED: IR remote control move speed: 5~24 **IR Z.SPEED:** IR remote control zoom speed: 1~7

MIN.SPEED: Minimum start speed for serial command: 0~9

SCAN. SPEED: move speed: 4~15

5. RESET

Move the pointer to the (SET) in the Main Menu, click the 【HOME】 and enter the (SET) as follow,

RESET

SYS. RESET

CAM. RESET

PT. RESET

ALL. RESET

BACK / MENU

SYS. RESET: Protocol: VISCA; Address: 1; baud rate: 9600; RS485: Off

CAM. RESET: camera parameter reset


PT. RESET: power action: Off; speed by zone: On; mount mode:Up;

IR move speed:16; IR zoom speed: 7;MIN.SPEED 0;SCAN. SPEED 10

ALL RESET: reset above 3 items


6. HELP

Show instruction of the OSD menu operation

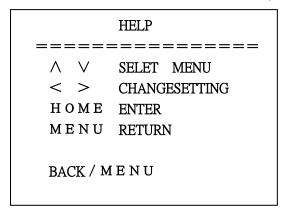

7. EXIT

In main menu, press the key [MENU] again will show the exit window as follows:

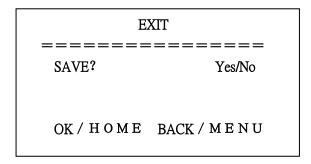

SAVE?: to save settings: Yes, No. Notice: press [HOME] key to confirm;

press [MENU] key to return to the main menu

Troubleshooting

Camera Maintains

If camera is not used for long time, please turn off power adapter switch and AC plug. Use soft cloth or tissue to clean the camera cover.

Use soft cloth to clean the lens; Use neuter cleanser if bad smeared. No use strong or corrosive cleanser or corrosive cleanser avoiding scuffing.

Unqualified Application

No shooting extreme light object, such as sunlight, lamplight etc.

No operating in unstable light environment, otherwise image will twinkle

No operating in radio wave with great power environment, such as TV station or

Wireless Launcher etc.

Image effective will not be good when the light is not accordant with camera's lux.

Troubleshooting

Image

No image

- 1, Check whether the power cord, voltage is OK, power indicator light is ON.
- 2, Turn off the power supply to check whether the camera can auto configure.
- 3, Check the dial switch in bottom and make sure the two dial position are all on OFF.
- 4, Check video and TV wire is connected correctly.

Abnormal display of image

Check whether the video connecting wires is well and other connecting sockets and camera

flat wires are well.

The camera can only works at one focus, other position can not be focused. Change the position to see if this phenomenon still exists. If yes, it may be caused by Camera control drive focus control system trouble.

Image dithering when at Maximum Zoom

- 1, Check whether camera is fixed correctly.
- 2, If there is vibrative mechanical object.

Remote Controller

- 1, Change the battery
- 2, Check the camera operation mode is right.

Terminal

- 1, Check the camera operation mode is right.
- 2, Check control wire is connected correctly.